

P2

Lining Instructions



SIMPLICITY · PERFORMANCE · STYLE

New Zealand

52 Newton Street,
PO Box 4370, Mount Maunganui
New Zealand

tel +64 7 579 0190
fax +64 7 579 0194
www.baytex.co.nz

Australia

tel 02 4340 4144
mob 0400 312 314

1a. Attach Halyard Pulley to Apex Fitting
- use shackle

1b. Attach Halyard Pulley to Apex Purlin
- use web Loop

2. Thread Halyard through
Lifting Ring and Pulley

3. Thread Halyard through
Knee Fitting



4. Layout Ground Cover


5. Attach Panel Apex Patch
to Lifting Ring

6. Connect Sister Clips

7. Pull Liner out to Eave Rail
- Attach Bungy Hook

8. Attach some Structure Hooks
-Refer to detail 13.

9. Velcro Panels together

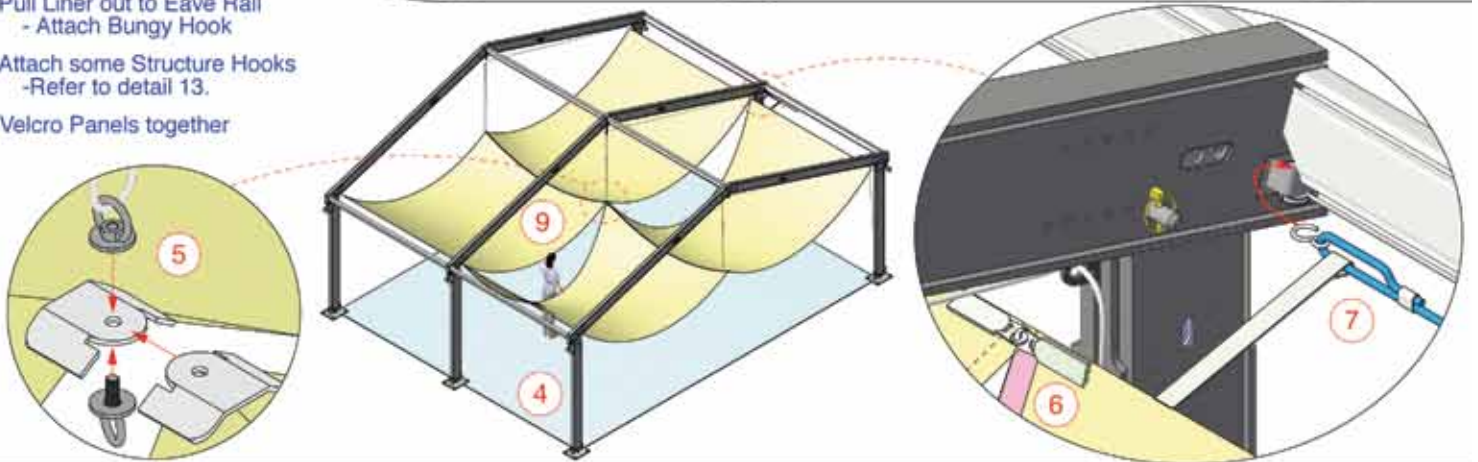

10. Attach Gable Apex Patch and Mid Apex Patch
to Lifting Ring

11. Fasten Corner Strap to Leg
- thread through Cambuckle


12. Velcro Panels
together



13. Attach balance of Structure Hooks
-twist to insert


14. Raise Liner to Finished Height
-Gable Eave Line is Straight

15. Tie Up Halyards at Eave
-out of sight

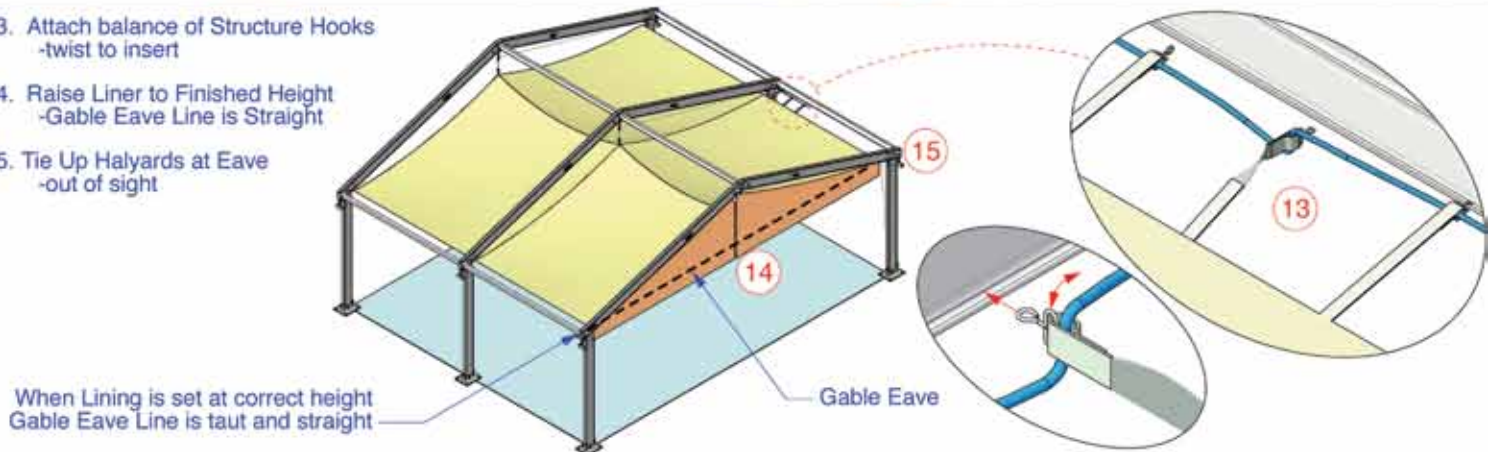

When Lining is set at correct height
Gable Eave Line is taut and straight

Parts Guide

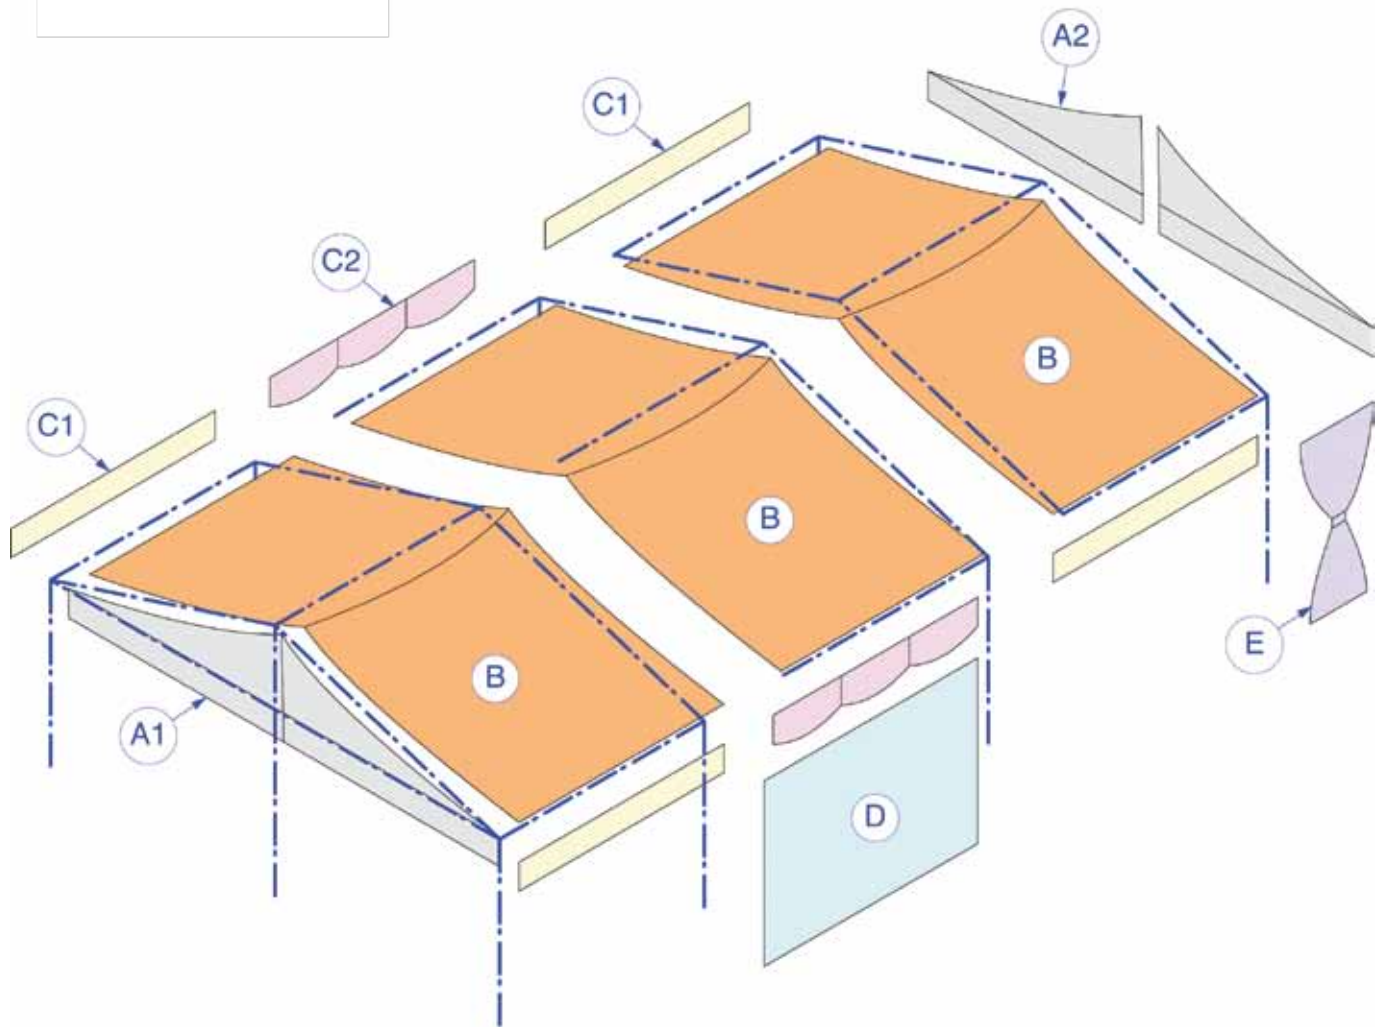

P2 Liner: Components	
Ref.	Part Name
A1	Gable Infill - One Piece
A2	Gable Infill - Two Piece
B	Mid
C1	Detachable Valance - Std
C2	Detachable Valance - Swage
D	Wall
E	Leg Drape