

ELECTRON POLE

Lining Instructions



SIMPLICITY · PERFORMANCE · STYLE

New Zealand


52 Newton Street,
PO Box 4370, Mount Maunganui
New Zealand

tel +64 7 579 0190
fax +64 7 579 0194
www.baytex.co.nz

Australia

tel 02 4340 4144
mob 0400 312 314

Tent Set Up

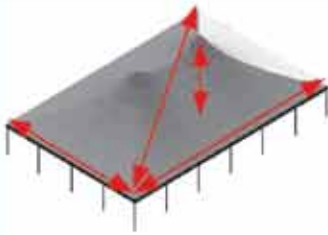

For best fit ensure the tent is properly erected. Ensure eave line is tensioned to design dimensions. Ensure that the tent is square. Ensure the centre poles are set to design height and in their correct vertical position.



1 Fit ball ring assembly to centre pole as shown

NB: Ensure all ropes, cords and cables run inside the ball ring



2 Alternatively a 2 piece ball ring can be fitted to the centre pole after tent erection.



3 Lining sections are designed to match the shape of the PVC. Layout the lining bags to correspond with the appropriate tent section.



4 The open end lining carry bag corners should be exposed. Start installation at one corner of the tent.



2 Attach first two corner lining hooks into the wall cord each side of the corner pole. Ensure the lining webbing is facing up and the lining is set firmly into the corner.



6 Stretch the lining section velcro join down the tent to first lacing joint. Ensure sister clip is centred on the lacing joint before hooking the lining to the wall cord.



7 Pull the remainder of the lining across to the other side of the tent and repeat the process.



8 Hook lining adjacent to each wall pole



9 Fit lining to the ball ring around centre pole.



10 Raise the ball ring to approximately head height.



11 Repeat the process for each mid section. Connect the mid section to the previously installed section by joining the sister clips as shown.



12 Stretch the lining mid section down the tent to the next lacing join. Ensure that the sister clip is centred on the lacing join before hooking the lining to the wall cord.



13 Pull the remainder for the lining mid across to the other side of the tent and repeat process.



14 Fit both lining pole patches to ball rings. Hook Pole lining to the ball ring before raising.



15 Walk back 1 metre at a time and touch the velcro seams together. Velcro mid and end sections together.



16 Repeat Installation Steps 4 - 10 for each mid section finishing with the end section. Velcro remaining sections together.



17 Lining is now ready to be raised.



18 Pull on the halyards to raise the lining approx. halfway up the pole.

NB: It is important that the entire lining is lifted evenly to prevent the ball rings from binding on the centre poles.



19 Attach remaining tent hooks to wall cord around entire perimeter of lining. Begin from the centre of each lining section, working out towards the ends.



20 Finish by hoisting the ball rings to their maximum height. When correctly set the lining should sit tightly into the eave line of the tent. The lining sections should drape smoothly and evenly from the ridge to the eave.

Installation should take approximately 10 minutes per section.

Centre Pole Liner Installation



1 The Centre Pole Liner is fitted to the Bail Ring before the lining sections are attached. The Pole Liner is designed for both large and small Bail Rings. The small Bail Ring as pictured above requires 2 loops to be fitted to one spike.



2
Centre Pole Liner fitted



3 Partially velcro pole drape in preparation for lifting



4
Ensure all ropes etc are tucked inside the pole lining.

Leg Drape Installation



1 Wrap leg drape around wall pole and attach tent hooks to wall rope



2
Join velcro



3 At approx. waist height, insert leg drape tie into leg drape velcro, wrap around leg drape and tie off neatly to allow leg drape to blouse.



4
The finished effect.